

LOCK ALARM

Distributed by Cheam RV's Ltd.

www.lockitupalarm.com

Directions for *Lock Alarm* Use:

1. There are two stages of locking the *Lock Alarm*. First, insert the pole into the lock. It will be securely locked, but the alarm won't be armed. (This is handy for those times when you don't want to set the alarm.)
2. To set the alarm, insert the key into the lock, turn the key and push the pole in until you hear a beep. Within 15 seconds, the lock will arm. If you accidentally bump it, the alarm goes on a 5-second alert. If there is no further tampering with the lock, the alarm won't go off and it will return to its original state. If, however, someone continuously tampers with the lock, the alarm will go off after 5 seconds.
3. If the *Lock Alarm* sounds and the thief is scared off and stops tampering with it, the alarm will stop after 35 seconds. It will then return to its original state of readiness. However, if the thief returns and resumes tampering with the lock, the alarm will go off again.
4. When the battery pack runs out and needs to be replaced, the *Lock Alarm* will warn you by giving several beeps.
5. When replacing the battery pack, open the lock with the key and re-move the two screws by the lock hole. Take the casing off and insert a small flathead screwdriver in order to pry the battery pack up. Make sure to note which way the batteries go into the pack.

LOCK ALARM

Use it to lock up your scooter, motorcycle, bicycle, boat motor, trailer, barbeque, shed doors, etc.

- Solid Brass
- Double Bolt Mechanism
- Uncuttable Key
- Unpickable Lock
- 84 Individual Wire Strands
- **ALARM: 110-decibel Siren**

Shock the Thief!

www.lockitupalarm.com